



How do I pair Viiiiva to my ANT+ sensors?

Viiiiva can connect ANT+ sensors to your app* of choice (*if it supports Bluetooth Smart sensors). The first time setup requires that you use the 4iiii app to pair Viiiiva to those sensors. After that, you are good to go!


1. Follow the steps for “**How Do I Pair Viiiiva to the 4iiii App?**”
2. Once Viiiiva is paired to the 4iiii app, in the Viiiiva Configuration page, select “Connect to ANT+ Sensors”. A list of available ANT+ sensors will appear.

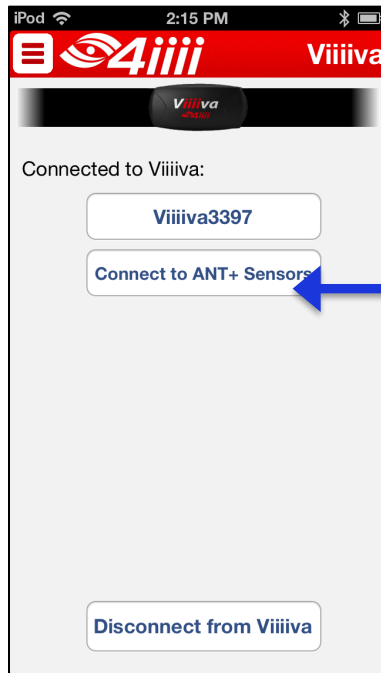


3. A list of available ANT+ sensors will appear. Select the ANT+ sensor(s) to connect to.

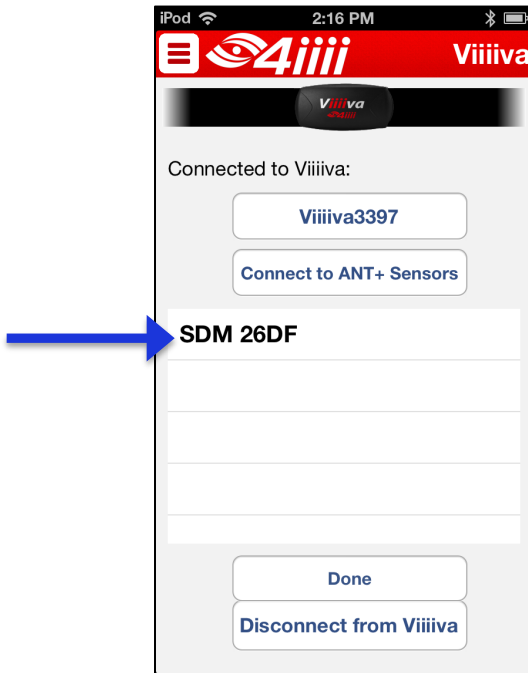


4. A check mark will appear beside the selected sensor(s). Select "Done" when all ANT+ sensors are paired.

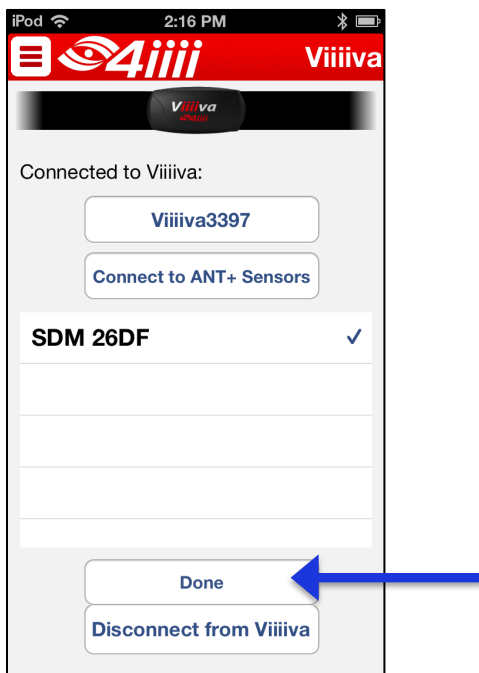


5. Select the “Menu” button at the top left of screen.

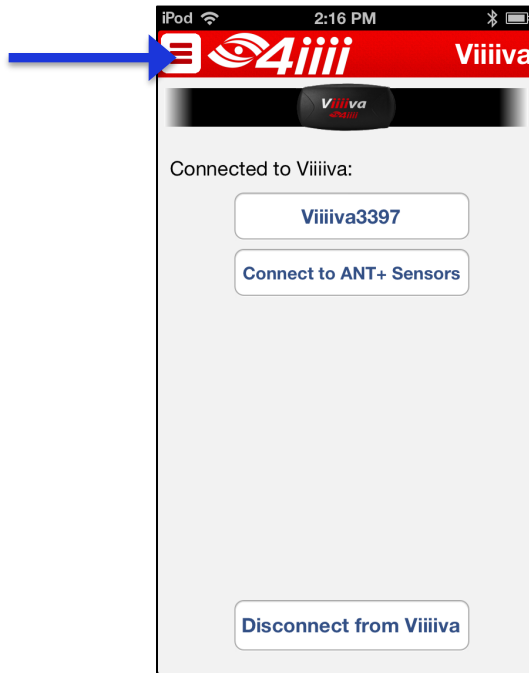

6. Select “Live Data.”

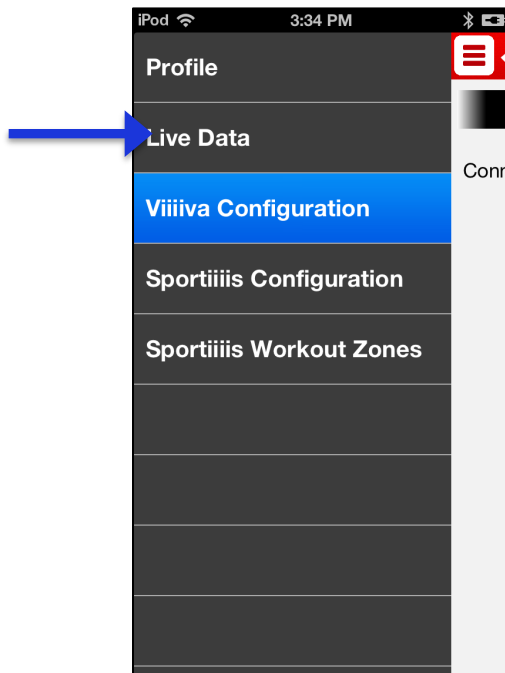


7. Verify that the heart rate data and your connected ANT+ sensor data is displayed. (Note – for speed, cadence, and power, there need to be appropriate movement to turn sensors on.)

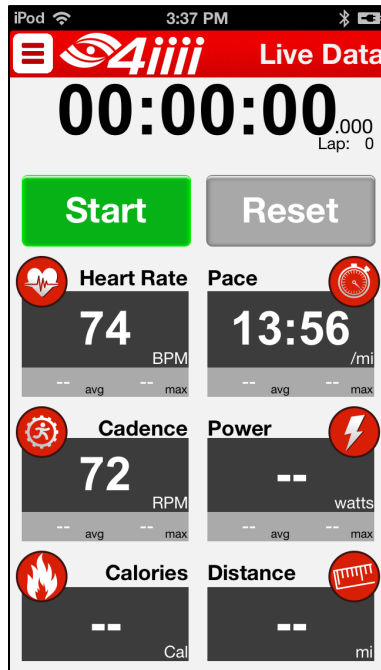


8. If you want to use the 4iiii app to monitor your data as you workout, stop here. If you want to use another app, follow steps 9 through 12.


9. Select the "Menu" button.

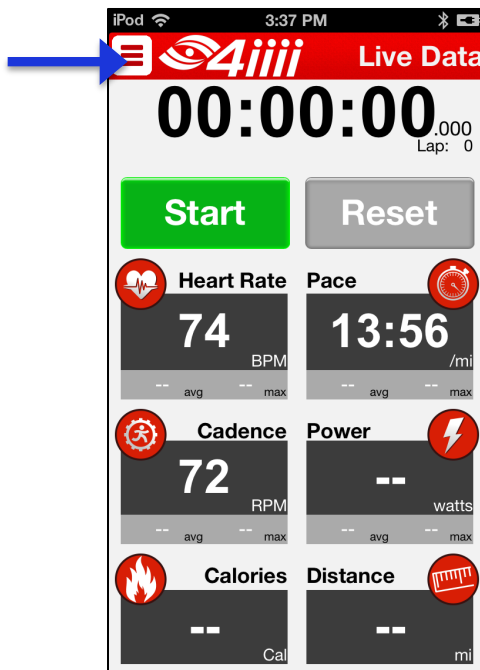

10. Select “Viiiiva Configuration.”

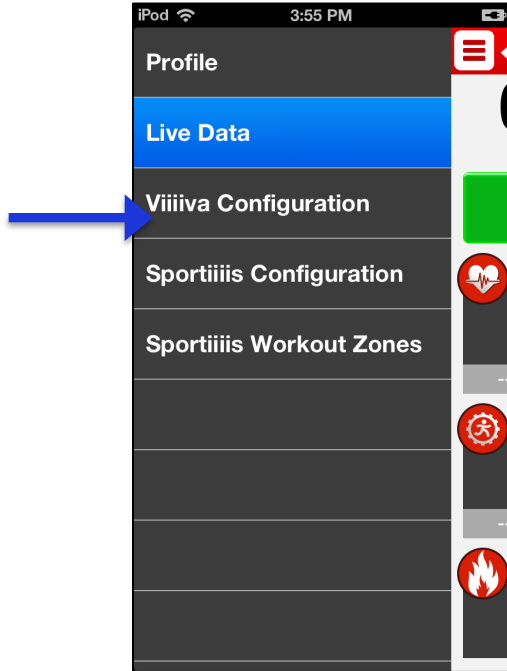

11. In the Viiiiva Configuration page, select “Disconnect from Viiiiva.”

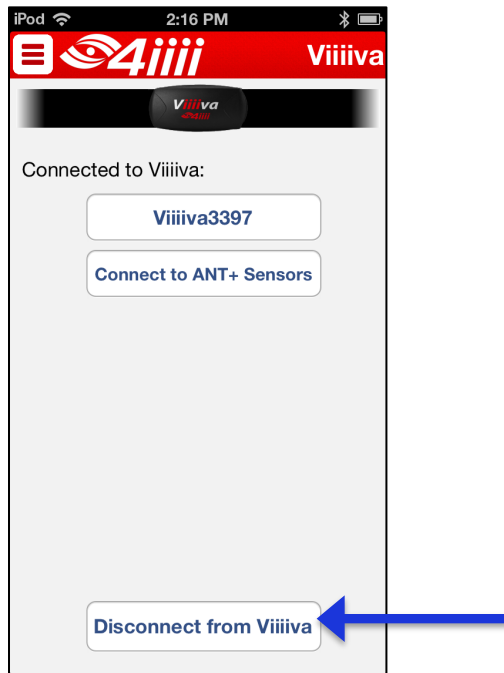

12. Exit the 4iiii app by pressing the iOS home button.

13. Follow your apps instructions for pairing to sensors. Important Note – pair to each sensor input individually from within your app.