


## How Do I Pair Viiiiva to the 4iiii App?


1. Put on your Viiiiva heart rate strap. Ensure that the electrodes are wet.
2. Download the 4iii App from the App store by searching for “4iiii” and then click the “FREE” button.

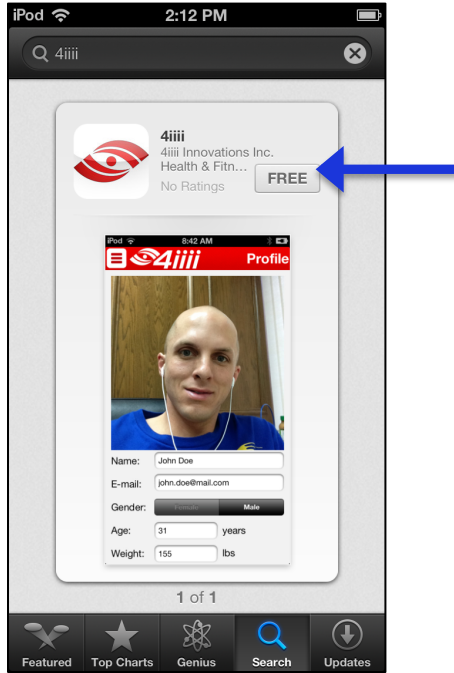


3. When you open the app, you will land on the profile page. Select the Menu button at the top left.




4. When the Menu page opens, select “Viiiiva Configuration.”

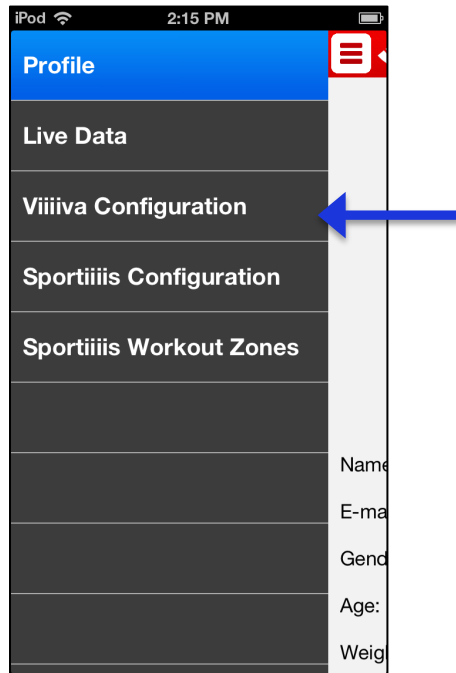

5. In the Viiiiva Configuration page, select “Click to Connect.”

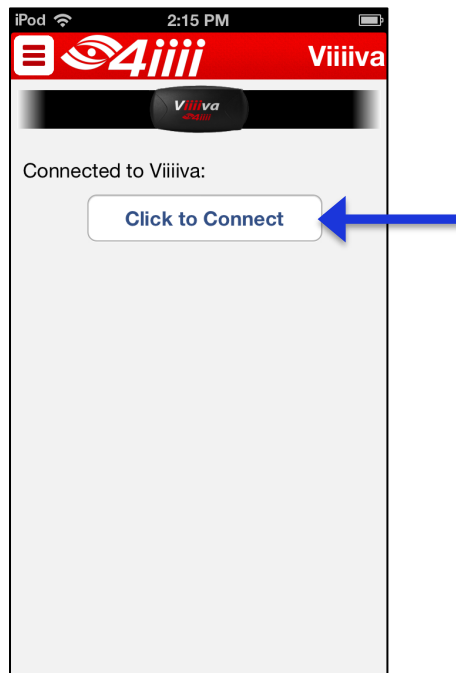

- The 4iiii app will scan for available Viiiivas and provides a list. Select the Viiiiva you want to connect to. (It is helpful to note the ID number).

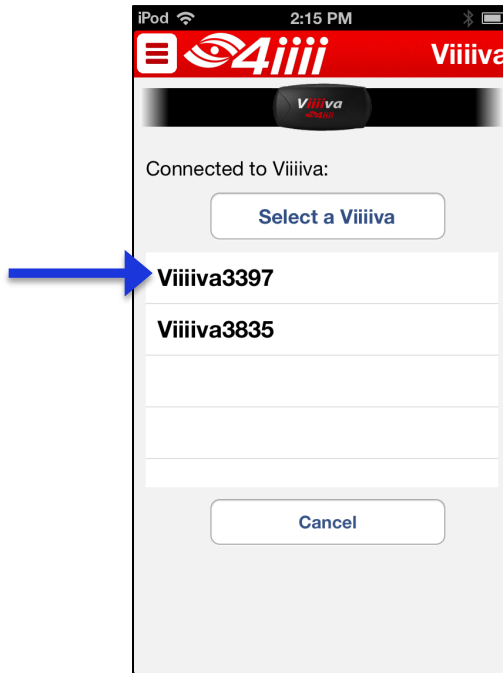

- Upon successful pairing, the 4iiii app will report "Connected to Viiiiva."

